



 
 
Infrared Remote Control Video Switch

Your RadioShack Infrared Remote Control Video Switch lets you switch between two 75-ohm VHF/UHF/Cable sources such as broadcast TV, cable TV, a VCR, or a video-disc player, without getting up from your couch or chair. The high-isolation design prevents interference between the two sources, and the electronic switching provides reliable operation because there are no mechanical parts to wear out. Also, the hand-held transmitter's miniature design takes up very little space on your night stand or end table.

INSTALLING BATTERIES

The transmitter requires two AA batteries. We recommend alkaline batteries. Follow these steps to install the remote control's batteries:

1. Remove the battery compartment cover by sliding it in the direction of the arrow.
2. Install two AA batteries according to the polarity symbols (– and +) shown in the compartment.




3. Replace the battery compartment cover.

CONNECTING THE REMOTE CONTROL SWITCH

The remote control switch has two 75-ohm input terminals and one 75-ohm output terminal. Connect the output terminals of the two 75-ohm VHF/UHF/Cable sources to the switch's **A IN** and **B IN** terminals. Then, connect the switch's center output terminal to your TV/monitor's input terminal.

Use 75-ohm coaxial cable for these connections. Your local RadioShack store sells the proper cable and other connection accessories.

The following illustrations show some common connections for the remote control switch.

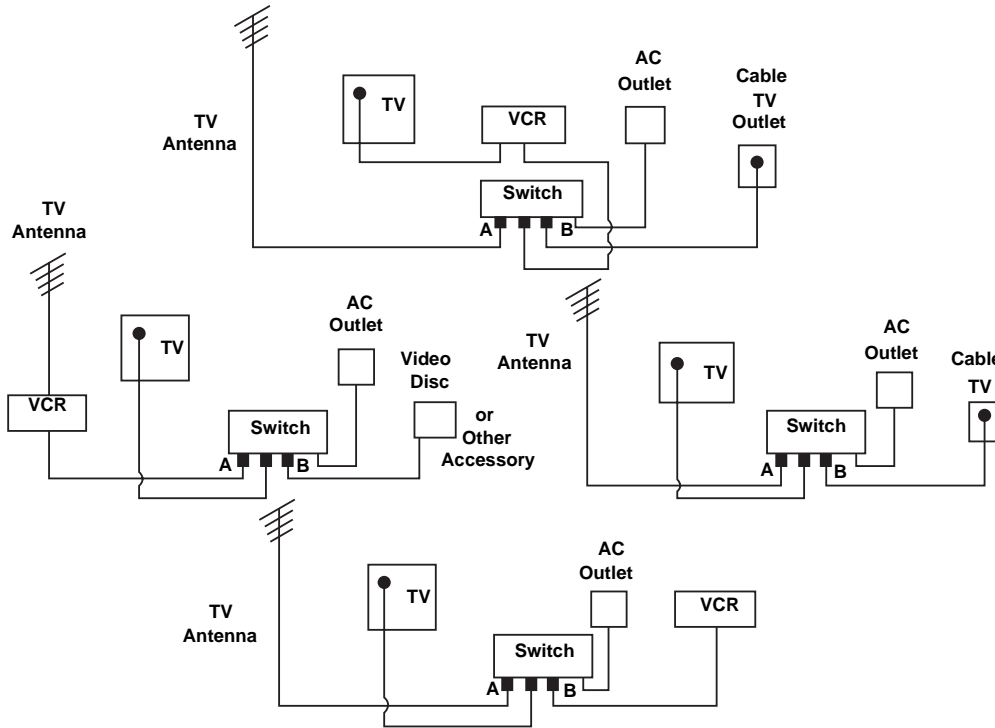 

CONNECTING THE AC ADAPTER

The remote control switch is powered by the supplied AC adapter. Connect the barrel plug to the **12VDC** jack on the back of the remote control switch. Then, plug the other end of the adapter into a standard AC outlet. The power turns on.

 
Caution: Use only the supplied adapter with the remote control switch. Using another adapter could damage the switch.

After you complete all connections, place the remote control switch on top of the TV

or at any other location that exposes the switch's INFRARED REMOTE window.

OPERATION





To operate the remote control switch, simply point the transmitter at the INFRARED REMOTE window on the front of the remote control switch and press A or B to switch between the two 75-ohm VHF/UHF/Cable sources.



SPECIFICATIONS

Input 75 ohms, F-Connector × 2
Output 75 ohms, F-Connector × 1
Isolation 5–220 MHz 80dB min; 220–550 MHz 65dB min; 550–900 MHz 50dB min
Insertion Loss 1 dB +/- 0.5 dB
Power Source.....120V AC; 60 Hz/12V DC,100 mA
Remote Control Range..... 23 ft(7 m)

    Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.



Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

04/99

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

10A99

15-1957
Printed in China